

LEGACY

User Handbook

 **Nightingale**



1600 Series

nightingalechairs.com

User Guide Adjustments



A 3D ARMS

To adjust arm height, pull upwards on arm pad. Keep pulling until desired height is reached. To lower, pull arm pad to maximum height to unlock arm height and then lower to lowest height to reset. To adjust arm pivot, press button under arm pad and turn pad inwards or outwards to desired position. Release to lock. To adjust arm width, pull arm outwards from bottom of arm.



B TILT LOCK

To adjust tilt lock, pull lever up, tilt chair to desired angle and push lever down to lock.



C PNEUMATIC HEIGHT ADJUSTMENT

To lower, adjust the lever while seated. To raise pull lever up with all weight off the seat.




Nightingale Corp.
T 1.800.363.8954
F 1.800.637.6784
www.nightingalechairs.com
info@nightingalechairs.com

User Guide Adjustments



D TENSION CONTROL

Turn knob clockwise to increase tension, turn counter-clockwise to decrease tension.

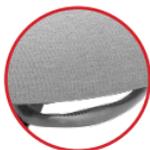


E SEAT SLIDE

To adjust seat depth, pull lever up to and with your weight off seat, move seat to desired depth. Release to lock position.



F RATCHET BACK HEIGHT

To adjust back height, pull back up to desired height and release to lock. To lower back height, pull back up until it reaches the maximum height and then allow it to lower to lowest setting.

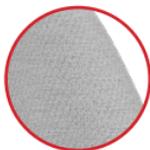

G SELF-ADJUSTING BACK

Built-in spring system, self-adjusts to shape and size of user's back, causing lumbar support to automatically move outwards to support lower lumbar area of the user.



Nightingale Corp.

T 1.800.363.8954

F 1.800.637.6784

www.nightingalechairs.com

info@nightingalechairs.com